



# **Pressure Washer Maker Kit**

## **Guide**

The Westinghouse WPX2300e cold-water, electric pressure washer is a compact and powerful tool that excels in cleaning a variety of surfaces including driveways, decks, vehicles, and more. With multiple nozzle options and a pro-steel spray wand, this 2300 PSI and 1.76 GPM deep cleaning tool will be sure to scrub away all mildew, grease, tar, oil, mud, rust and more.

## **Starting Out**

To begin, it is highly advised that you read the User Manual in order to fully understand the utmost importance of safety when handling and using a pressure washer.



## Pressure Washer Maker Kit Starting Out - continued

To begin setting up the pressure washer, turn off the water faucet connection completely. Uncoil and straighten the garden hose to remove any bends or kinks and flush water through the hose to remove any debris, then turn the faucet off again. Insert the garden hose into the water inlet and make sure to tighten it securely onto the pressure washer.

With totally dry hands, completely unwind the power cord and connect it to a grounded 120 volt outlet. **Do not touch the plug with wet hands.**

Make sure to turn the water faucet back to the “ON” position before turning pressure washer power to “ON”.



## **Pressure Washer Maker Kit Starting Out - continued**

Hold the trigger handle with both hands and point the lance in a safe direction. Release the safety lock and squeeze the trigger to release water and air out of the hose. Continue squeezing the trigger until there is a steady stream of water, then release and lock the trigger. Use as needed.

When you stop the pressure washer, water pressure may remain in the system. Point the trigger handle in a safe direction and pull the trigger to release the water pressure after you have safely turned off the water supply.

**Please turn off the pressure washer after five minutes of inactivity.**



## **Pressure Washer Maker Kit Starting Out - continued**

If using detergent, **ONLY USE** detergent designed for pressure washers. The detergent should be the consistency of water.

**DO NOT USE** thick, gel-like detergents, as they will clog the pressure washer and can cause damage to the machine.

When you are finished, remove excess detergent from the soap tank and fill it with clean water. Spray the water through the soap nozzle to fully flush the system.

**Please clean off the pressure washer and remove any detergent or water from container prior to returning the kit back to the library.**



# Pressure Washer Maker Kit

## Troubleshooting

If you experience problems, please contact the Reference Desk at

[cvref@wclibrary.info](mailto:cvref@wclibrary.info)

## Feedback

We would love to hear how your experience was! Please consider sharing photos or videos of your experience with us on social media:

**Facebook:** [www.facebook.com/wclibrary.info](https://www.facebook.com/wclibrary.info)

**Instagram:** [www.instagram.com/wclibrary5859](https://www.instagram.com/wclibrary5859)

Facebook



Instagram



washingtoncenterville  
PUBLIC LIBRARY

[www.wclibrary.info](http://www.wclibrary.info)

<https://tinyurl.com/4t2wymyh>



# User Manual

**WPX2300e**

**ELECTRIC PRESSURE WASHER**

**2300 PSI | 1.76 GPM**



**DO NOT RETURN THIS PRODUCT TO THE STORE**

If you have questions or need assistance, please call customer service at 855-944-3571.



# Pressure Washer Maker Kit Visual Inventory



Pro-Steel Wand



25ft Hose



35ft Power  
Cord with  
GFCI Plug



Pressure Washer



Nozzles



Waterproof  
Carrying Case



washingtoncenterville  
PUBLIC LIBRARY

[www.wclibrary.info](http://www.wclibrary.info)

# Pressure Washer Nozzle Guide



## **15° NOZZLE**

Moderate pressure. Safe to use on brick and paved patios.



## **25° NOZZLE**

Moderate pressure. Safe to use on brick and paved patios.



## **40° NOZZLE**

Light pressure. Used for general purpose cleaning, especially on delicate surfaces like cars, windows, and painted surfaces



## **SOAP NOZZLE**

Low pressure. Safe for cars, windows and decks.





# Pressure Washer Maker Kit

## Inventory

Materials in this kit include:

- Pressure Washer
- Waterproof Carrying Case
- 25ft Hose
- Pro-Steel Wand
- 35ft Power Cord with GFCI Plug
- Nozzles
  - 15° Nozzle
  - 25° Nozzle
  - 40° Nozzle
  - Soap Nozzle

Please be sure to return all materials.



washingtoncenterville  
PUBLIC LIBRARY

[www.wclibrary.info](http://www.wclibrary.info)

# Waiver of Liability

By using any kits, equipment, materials, or instructions provided by Washington-Centerville Public Library, participants agree to release Washington-Centerville Public Library their agents, employees, representatives, affiliates, and any and all persons, firms, or corporations who might be claimed to be liable from any and all claims, demands, actions, or suits of any kind or nature whatsoever relating to any and all injuries, damages, or losses of any and every kind, to both person and property, and also any and all injuries, damages, or losses that may develop in the future as a result of or in any way relating to the use of kits, equipment, materials, or instructions from Washington-Centerville Public Library.



washingtoncenterville  
PUBLIC LIBRARY

[www.wclibrary.info](http://www.wclibrary.info)

**ATTENTION:  
PLEASE  
CLEAN OFF  
THE  
PRESSURE  
WASHER.**

**REMOVE ANY  
DETERGENT  
OR WATER  
FROM  
CONTAINER  
PRIOR TO  
RETURNING  
THE KIT.**