



## Toniebox® Kit Guide

The Toniebox® Kit is meant to give your child a storytime experience featuring their favorite characters or subjects.

### Age Recommendations

The Toniebox® is suitable for children ages 2-12. However, the characters in your kit might be more age specific.

**NOTE: Tonieboxes® are tough, but please make sure your child is treating the Toniebox® nicely. It can still break!**

### About

Tonieboxes® are interactive audio players that tell stories and play songs to give your child screen-free entertainment. They are great to use during quiet time or road trips and offer another way for auditory learners to access and absorb content.

### To Get Started

Press one of the “ears” to turn on. Is the square light on top white? If so, simply place a Tonie® on top of the player. **(If not, see below under “green light” for instructions before using.)**

Songs and stories should start playing automatically. If not, try placing the Toniebox® on the charger and attempting again. To learn about the Tonie's® tracklist and content, scan the QR codes provided in the kit.

**NOTE: Only characters included in this kit will work on the Toniebox®. Other characters will not. If you would like to sample different characters, view our online catalog to see what content other Toniebox® kits offer.**

To control volume: press (but not hold) the left “ear” to decrease volume, the right “ear” to increase

To fast forward one track/chapter: tap the right side of the box once

To rewind one track/chapter: tap the left side of the box once

To pause: remove the character from the top – when placed back on the box, the content will start where it last left off

The Toniebox® will automatically shut off after 10 minutes of inactivity. You do not need to do anything to make the box turn off.

### Things to Know

Some features of Tonieboxes®, such as setting sleep timers and restricting access to content, are not available for patron configuration. Toniebox® settings are controlled by the Library. Additionally, Library owned Tonieboxes® will only play characters included in the kit you have checked out; other Tonies® will not work. Conversely, Library owned Tonies® will work on your personally owned Toniebox®.

**Total Replacement Cost: \$366** *Waiver of Liability: By using any kits, equipment, materials, or instructions provided by Washington-Centerville Public Library, participants agree to release Washington-Centerville Public Library their agents, employees, representatives, affiliates, and any and all persons, firms, or corporations who might be claimed to be liable from any and all claims, demands, actions, or suits of any kind or nature whatsoever relating to any and all injuries, damages, or losses of any and every kind, to both person and property, and also any and all injuries, damages, or losses that may develop in the future as a result of or in any way relating to the use of kits, equipment, materials, or instructions from Washington-Centerville Public Library.*

White light: Toniebox® is charged and ready to go

Orange light: Toniebox® needs to be charged

Red light, or Toniebox® is giving you a message with a “codeword”: Something is wrong – please bring to the Children’s Desk for repair

**Green light:** Toniebox® is in the wrong mode. To put it in the correct mode, please pinch both “ears” for 5 seconds until you hear a beep. Then, pinch one “ear” for 3 seconds until the Toniebox® says “I’m offline now.”

### **IMPORTANT**

To operate appropriately, the Toniebox® must be in “offline” mode. This is the default setting and should be the mode the Toniebox® is in when you borrow it. If the box is **not** in “offline” mode, it may not work properly. “Offline” mode is indicated by a white light when the Toniebox® is turned on. **If this is not the case, please see “green light” above for troubleshooting help.**

Please **DO NOT** attempt to put the Toniebox® in “online” mode, connect to Wi-Fi, or perform a factory reset. This will result in the Toniebox® malfunctioning and will require several hours of reprogramming to fix.

### **Feedback**

We love to receive feedback. Please let us know about your experience! Email us at [cvjuve@wclibrary.info](mailto:cvjuve@wclibrary.info) or call (937) 433-8091 or (937) 435-3700 and select option 3.

**Total Replacement Cost: \$366** *Waiver of Liability: By using any kits, equipment, materials, or instructions provided by Washington-Centerville Public Library, participants agree to release Washington-Centerville Public Library their agents, employees, representatives, affiliates, and any and all persons, firms, or corporations who might be claimed to be liable from any and all claims, demands, actions, or suits of any kind or nature whatsoever relating to any and all injuries, damages, or losses of any and every kind, to both person and property, and also any and all injuries, damages, or losses that may develop in the future as a result of or in any way relating to the use of kits, equipment, materials, or instructions from Washington-Centerville Public Library.*